



Printed on durable  
waterproof paper

**CAUTION: INSTALLER AND SERVICE PERSONNEL MUST PLACE THIS GUIDE IN PLASTIC POUCH AND ENSURE IT IS ATTACHED TO THE SAFETY BARRIER AFTER INSTALLATION IS COMPLETE SEE FIG. 9**

## Instructions for Riser Kits

P/N: 102367 101975 101976 102576 101977 102577 101978 102578 102579 102580 101979 102581 102582 102583 102364

**CRITICAL SAFETY WARNING:** Always securely attach Riser Cover to Riser by installing and tightening the (4) screws using the appropriate driver tool. Cover security must be checked after each tank servicing. Cover must be inspected regularly for damage and security. The secondary safety barrier must be securely fastened in place at all times. The safety barrier must only be removed to gain entry into the tank by a properly credentialed professional donning appropriate safety gear.

***An unsecured cover or secondary safety barrier is a serious safety risk.***

### Tools required:

- Electric Drill
  - 5/32" drill bit (carbide tip if septic tank is concrete)
  - #3 Phillips head driver bit
  - Utility knife
  - Safety glasses
  - Gloves
- \*\*\* Beware of sharp edges when handling components\*\*\*

**Steps:** Installation must be performed by person possessing mechanical competence.

- 1.) With the white tape upward, apply approximately 77" of butyl sealant rope (Figure 3A) around the perimeter of the adapter flange where the riser pipe will meet the flange (Fig.1) & (Fig. 2), overlapping and kneading the ends of the butyl rope together to ensure a water-tight seal.
- 2.) Remove the white tape from the sealant rope and discard the tape.
- 3.) With the (4) pre-drilled holes upward (Fig. 5) & (Fig. 10), center the riser pipe on the adapter flange so the gap is even all of the way around. Do not apply downward pressure while adjusting the gap. When the even gap is achieved, lightly lower the riser pipe onto the butyl rope. As required, make final adjustment and apply firm downward pressure to seat the riser pipe into the butyl rope. Apply the pressure all around the riser pipe every 30 degrees.
- 4.) Locate the six (6) mounting holes on the inside perimeter of the adapter flange. Install six (6) screws to attach the riser pipe to the adapter flange. Drive the screws with the screw tilted upward following the pre-drilled hole until the head slightly compresses the adapter flange (Fig 3.). When properly tightened there will be approximately a 1/4" gap between the riser flange and the riser pipe (Fig. 4). All six screws must be visible when complete (Fig. 5).
- 5.) Repeat steps 1 – 4 for each section for risers 23" tall and greater. NOTE: lower sections do not have pre-drilled holes, therefore space equally around inner perimeter.



Figure 1



Figure 2

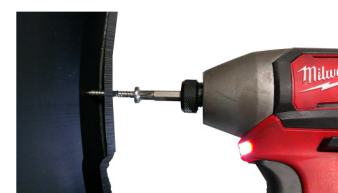


Figure 3

### How to Install the Safety Barrier

**CAUTION: INSTALLER AND SERVICE PERSONNEL MUST PLACE THIS GUIDE IN PLASTIC POUCH AND ENSURE IT IS ATTACHED TO THE SAFETY BARRIER AFTER INSTALLATION IS COMPLETE SEE FIG. 9**

- 6.) Locate the six mounting slots on the safety barrier (Fig. 6). Insert the safety barrier into the riser ensuring the six mounting slots align with the 6 screws (Fig 5), (Fig. 6) & (Fig. 7).
- 7.) Confirm all six slots are engaged with all six screws. While applying slight downward pressure, rotate the safety barrier clockwise, the direction the "LOCK ARROW" points. A slight rap with the palm of the hands in the safety barrier triangular openings will seat the safety barrier in place.
- 8.) Grasp the openings of the safety barrier and pull upward. It MUST NOT dislodge from the assembly. If all of the mounting tabs are not engaged with the screws, remove the safety barrier and repeat step 6 through step 8 until the safety barrier is secure.

**WARNING: FAILURE TO PROPERLY ENGAGE THE SAFETY BARRIER WILL DEFEAT THE SAFETY FEATURE OF THE DEVICE!**



Figure 3A

- 9.) Expose and clean a 32" x 32" square area on the top of the septic tank centered on the clean-out opening on the tank.
- 10.) With the white tape upward, apply the butyl sealant rope around the groove on the bottom of the adapter flange (Figure 3A), overlapping and kneading the ends of the butyl rope together (Fig. 8).
- 11.) Remove the white tape from the sealant rope and discard the tape.
- 12.) Center the riser assembly on the tank clean-out opening and apply pressure around the perimeter of the base flange above the butyl sealant rope to compress sealant between the tank and the adapter flange.
- 13.) Drill (4) 5/32" diameter holes through the four corners of the adapter flange (Fig. 9) at least 3/4" deep into the tank cover. If the tank is made of concrete, use a carbide tip masonry bit.
- 14.) Fasten the base plate to the tank using four (4) enclosed blue screws.
- 15.) Backfill around riser with sand or washed stone to prevent movement from frost if applicable in your climate.



Figure 4

- 16.) ***Always re-install (4) cover security screws and tighten with appropriate driver tool to secure Riser Cover to Riser Pipe (Fig.10) & (Fig. 11)***

**WARNING: FAILURE TO PROPERLY SECURE THE RISER COVER WILL CREATE A SERIOUS SAFETY RISK!**

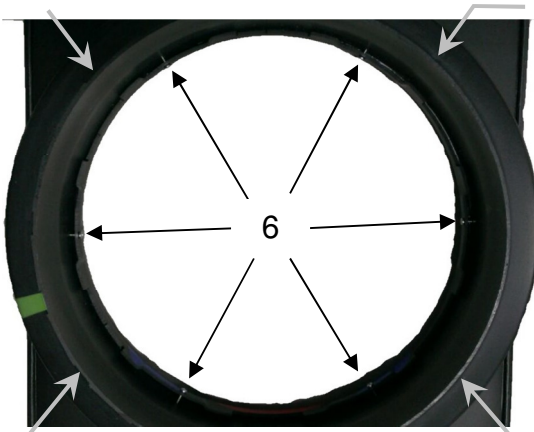


Figure 5

(4) pre-drilled holes  
for cover screws

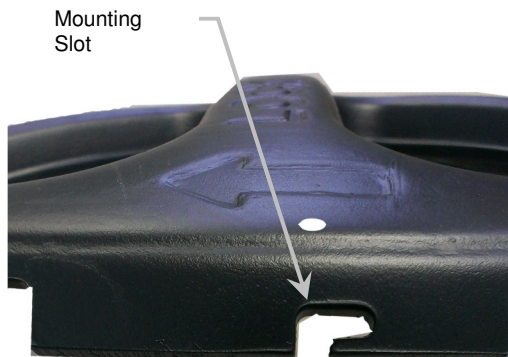


Figure 6



Figure 7



Figure 8

Butyl Rope in Bottom  
Groove All Around



Figure 9

***Screw through  
Hole in Pouch***

(4) Mounting Holes

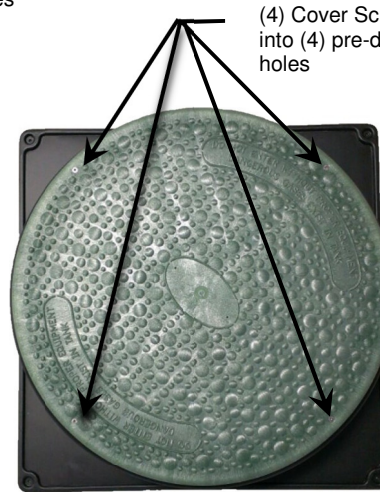


Figure 10

(4) Cover Screws  
into (4) pre-drilled  
holes



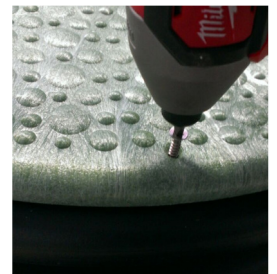


Figure 11


***Always Return Guide to Pouch after  
Installation or Servicing!***

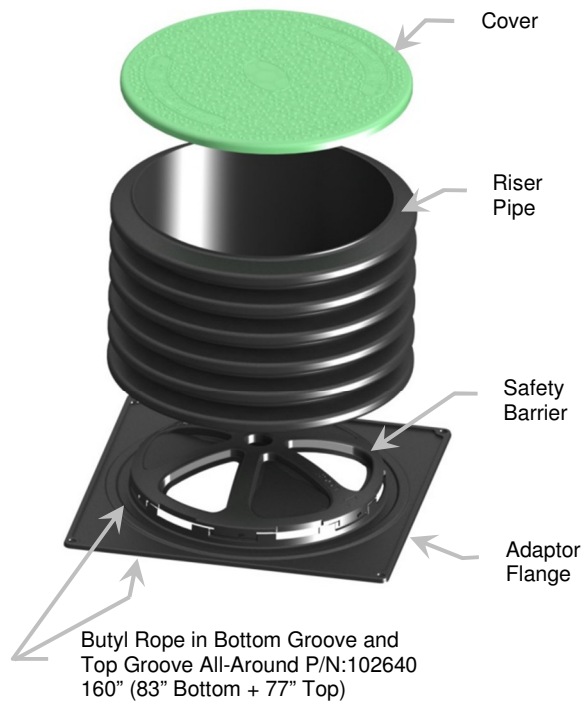

**Figure 12**  
All Risers up to 20" Tall

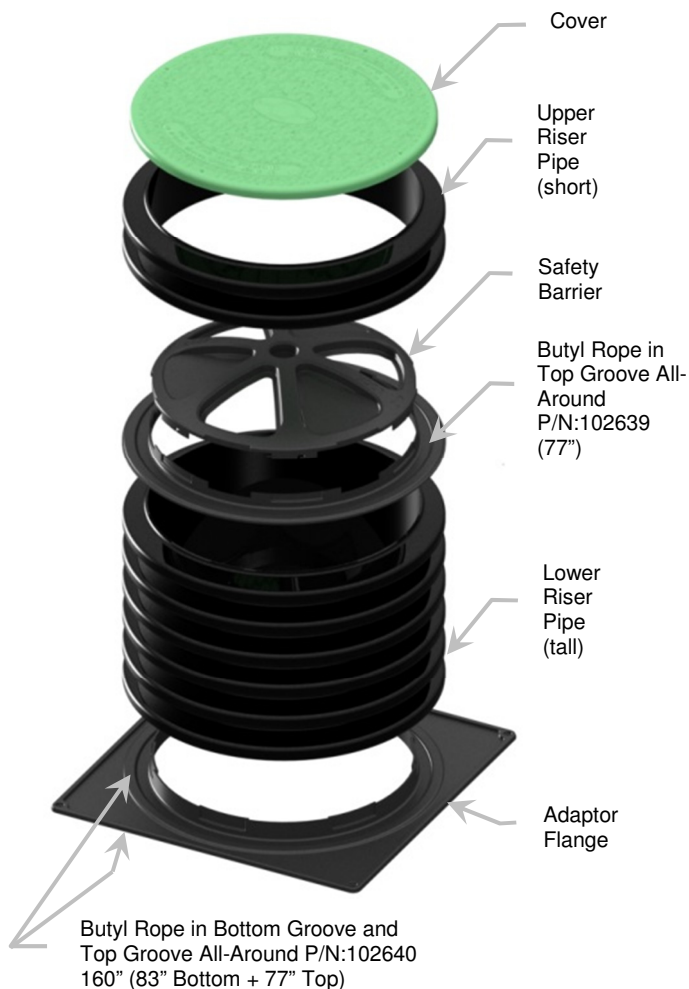

**Figure 13**  
All Risers 23" – 38" Tall

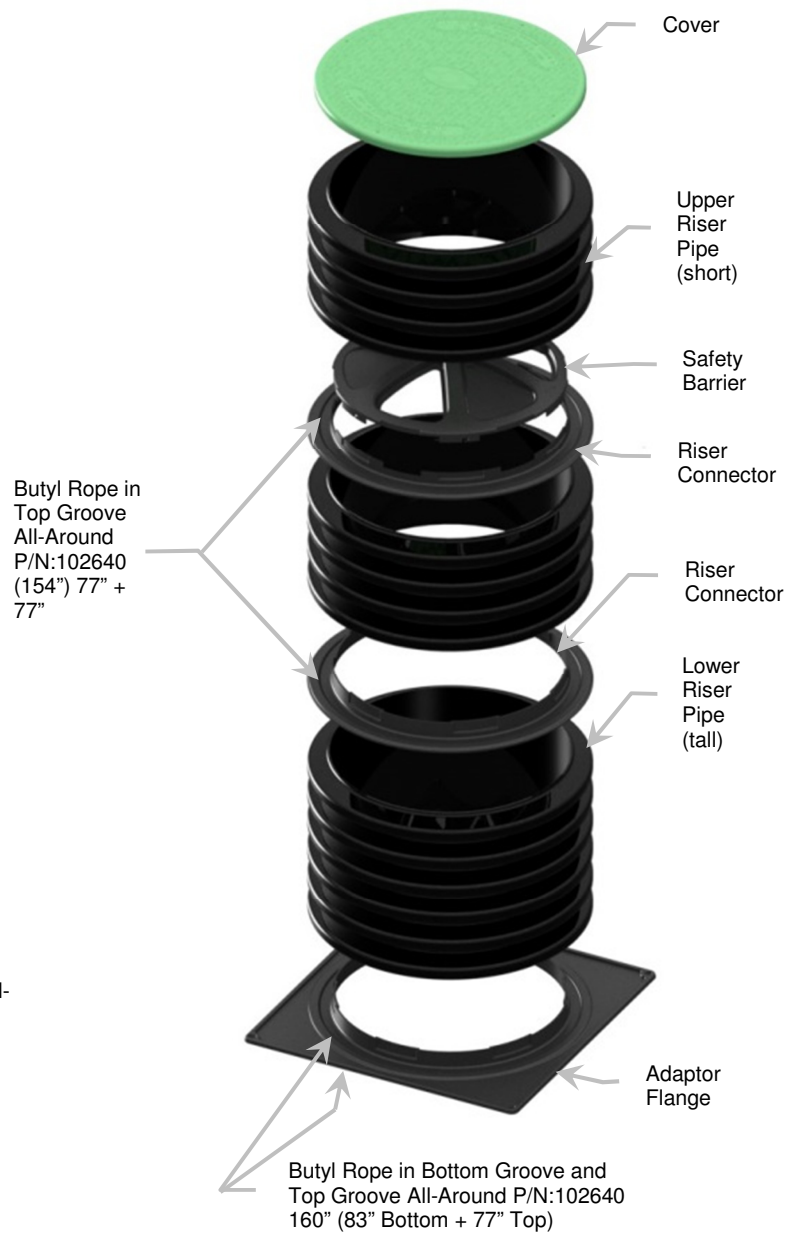

**Figure 14**  
All Risers 41" or Taller